



Model P60-HTC pH/ORP Hot/Wet Tap Ball Valve Assembly

SPECIFICATIONS P60-HTC

WETTED MATERIALS: CPVC, EPDM



MAXIMUM RATINGS: 200PSI @ 25°C / 30PSI @ 100°C

TO REMOVE PROBE FROM BALL VALVE

1. PULL BACK SAFETY SHROUD
2. LOOSEN SECURING NUT AND WITHDRAW PROBE TO SAFETY STOP
3. CLOSE BALL VALVE
4. UNSCREW UNION CCW

TO REMOVE PROBE FROM UNION BODY

5. PULL PROBE FORWARD THROUGH PROBE FITTING

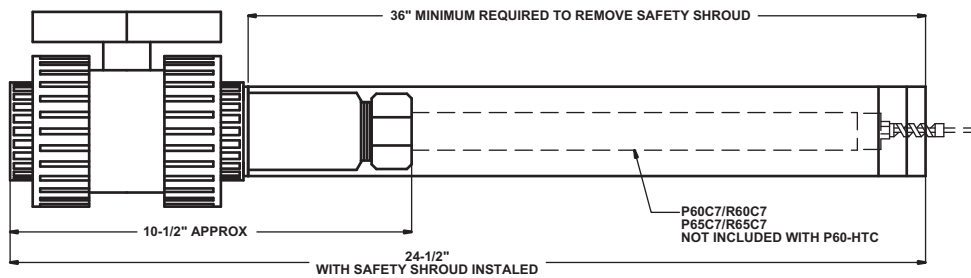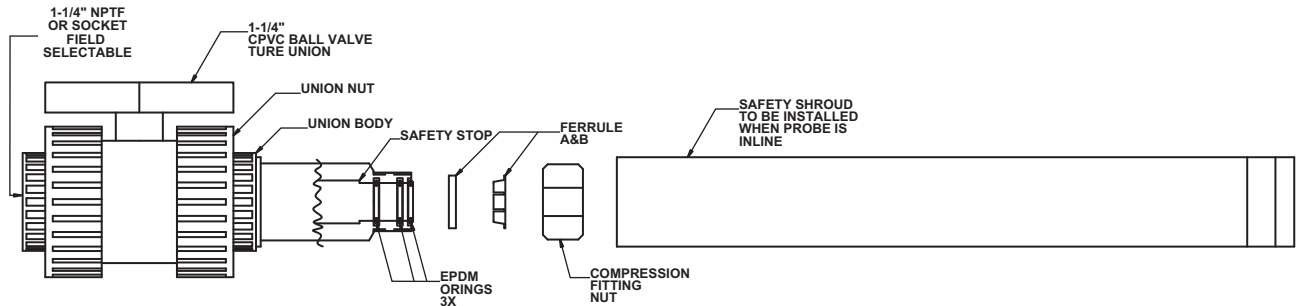

AquaMetrix Inc.
www.aquametrix.com
1-800-742-1413

